



WAVEFORMS - PETRO CANADA SSTTS COMMISSIONING
 FEBRUARY 08/97
 RECORDED BY: D. HENIGMAN


© 2003 – ALL RIGHTS RESERVED

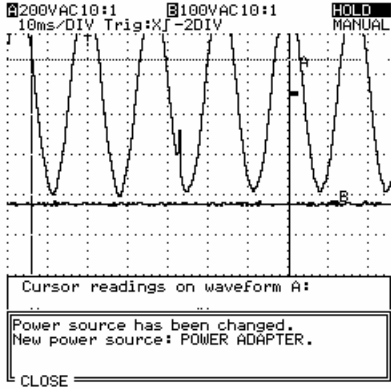


Trace "A" - Critical Load **Phase A** Voltage
 Trace "B" - SSTS Close Command to ATS
 Coil, Trigger Source
Transfer Direction - Emergency to Normal

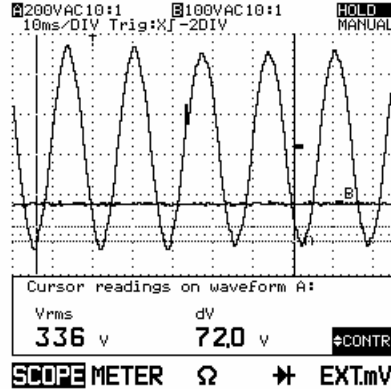

Trace "A" - Critical Load **Phase B** Voltage
 Trace "B" - SSTS Close Command to ATS
 Coil, Trigger Source
Transfer Direction - Emergency to Normal

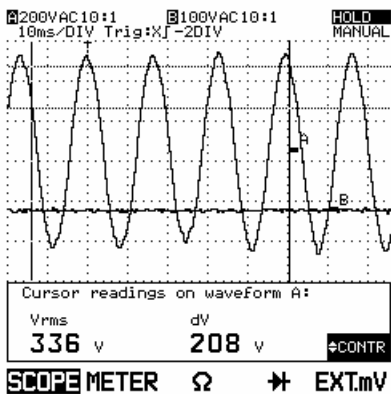


Trace "A" - Critical Load **Phase A** Voltage
 Trace "B" - SSTS Close Command to ATS
 Coil, Trigger Source
Transfer Direction - Normal to Emergency

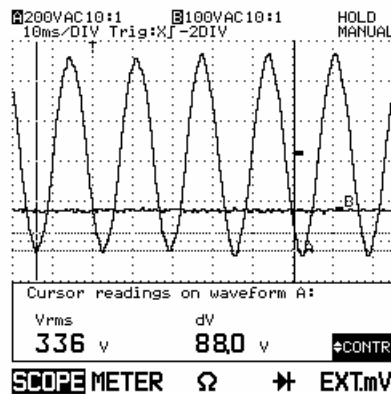


Trace "A" - Critical Load **Phase B** Voltage
 Trace "B" - SSTS Close Command to ATS
 Coil, Trigger Source
Transfer Direction - Normal to Emergency

WAVEFORMS - PETRO CANADA SSTTS COMMISSIONING
FEBRUARY 08/97
RECORDED BY: D. HENIGMAN

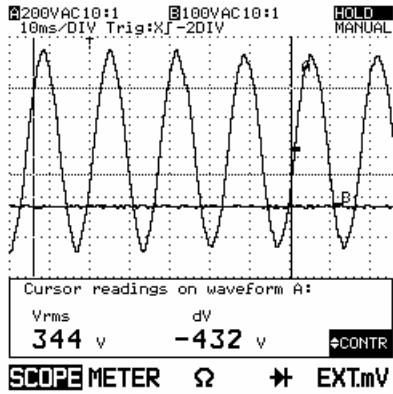

Trace "A" - Critical Load **Phase C** Voltage
Trace "B" - SSTS Close Command to ATS
Coil, Trigger Source
Transfer Direction - **Emergency to Normal**

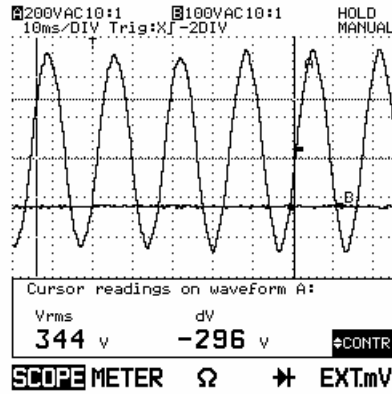

Trace "A" - Critical Load **Phase C** Voltage
Trace "B" - SSTS Close Command to ATS
Coil, Trigger Source
Transfer Direction - **Normal to Emergency**